

WARNING

Your Banks pyrometer is a delicate instrument. Please adhere to the following guidelines to ensure the best performance from your gauge.

- The pyrometer requires no power. NEVER apply vehicle voltage to the pyrometer terminals, as damage beyond repair will occur. Only the illuminating lamp requires voltage.
- Aggressive handling can damage internal parts. Use care to avoid dropping, jarring or impacting. Defects due to mishandling will not be covered by the warranty.
- Do not remove the label from the case of the pyrometer. Removal will void the warranty.
- Make sure that both connections between the probe and the leadwire are as tight as possible and protected by the black heat shrink. If these connections are loose or come in contact with other metal components in the engine compartment, the pyrometer will malfunction.

GALE BANKS ENGINEERING

P.N. 96749 v2