



FITTING INSTRUCTIONS

Part Number: **RDTAB1355 & RDTAB1045**
Product **ROLLER DRAWER TABLE SUIT ARB OUTBACK SOLUTIONS DRAWER**
Description:
Suited to **ARB OUTBACK SOLUTIONS ROLLER DRAWER FIXED TOP ONLY**
vehicle/s:

NOTE THE FOLLOWING:

- ◆ This product must be installed as per these instructions using only the hardware supplied.
- ◆ In the event of damage to any component, contact your nearest authorised ARB stockist.
- ◆ Do not use this product in any drawer system, other than those specified by ARB.
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Unless otherwise instructed, tighten fasteners to specified torque

GENERAL CARE AND MAINTENANCE

By choosing an ARB stainless steel table you have bought a product that is manufactured from a high grade stainless steel, and if looked after correctly will give you many years of service. It is engineered to be a reliable high quality accessory that represents excellent value. To keep your table in original condition it is important to care and maintain it following these recommendations:

- It is recommended that following exposure to salt and or other contaminants, the table and mounting area be thoroughly rinsed to prevent corrosion.
- As part of routine care, it is recommended to clean the table with stainless steel wipes. These wipes leave a streak free shine and leaves a protective film that repels new marks.

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arb.com.au
exports@arb.com.au

FITTING REQUIREMENTS

REQUIRED TOOLS FOR FITMENT OF PRODUCT:

4MM HEX KEY	WIRE CUTTERS
10MM SOCKET AND DRIVE	NO. 2 PHILLIPS SCREWDRIVER

FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft
M6	9Nm	7lbft


PARTS LISTING- RDTAB1355 & RDTAB1045

APPLICATION.	PART NO.	QTY	DESCRIPTION
ROLLER DRAWER TABLE INSTALLATION			
	5670036	4	SLIDE BLOCK
	5670034	1	D HANDLE
	5670038	1	SLIDE ASSY LH
	5670037	1	SLIDE ASSY RH
	6151871	14	SCREW BTN HD M6 X 16
	6151162	8	NUT HEX M6 X 1.0 NYLOCK
	6151128	6	NUT FLANGE M6 X 1.0
	6151269	2	SCREW M4 X 10
	6523190 / 6523191	1	TABLE TOP
	5670048	1	7 x 5MM EPDM EDGE STRIP
	3789716	1	FITTING INSTRUCTIONS



Insert 2 nylock nuts into each slide block. Ensure that the nylon in the nut is facing out as shown.

Remove plastic protective layer from the stainless steel components in preparation for the next steps.

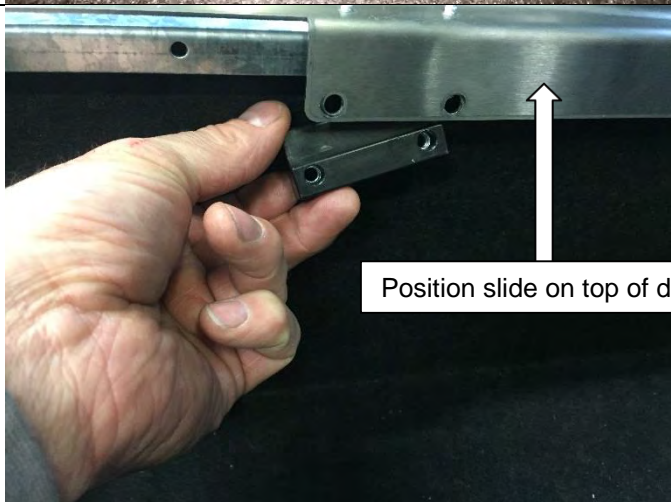

Position 1 sliding rail on top of the outside wall of drawer.

Insert 2 slide blocks behind the lip on top of the drawer and secure to the sliding rail using 2 button head screws in each block.




The sliding rail should now be secured in place on top of the drawer sidewall.

Repeat the process on the second sliding rail.



Place the table top over the 2 sliding rails.

The edges of the table top are to be positioned on the outside of the sliding rails.

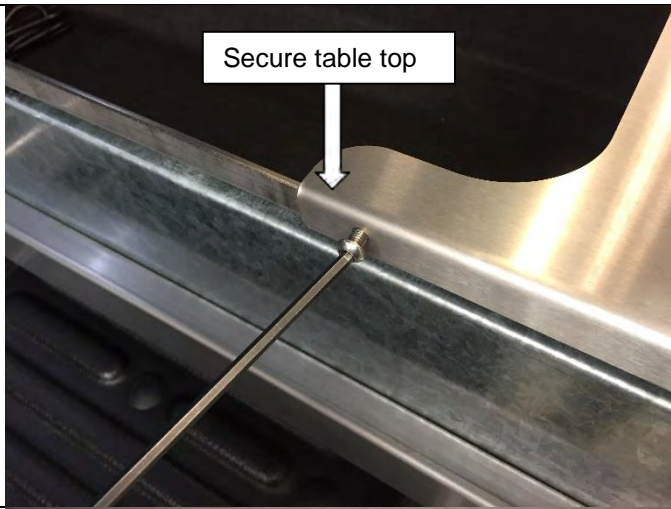

Secure the table top to the sliding rails using 6 x button head screws and 6 x M6 flange nuts.


Insert the screw through the outside of the table top and attach the nut from the underside.



Discard the 2 x M4 x 35mm screws packaged inside the plastic sleeve containing the D handle.

Attach the D handle to the table using the 2 x M4 x 10mm screws supplied in the installation kit.

Secure the handle from the underside of the table using a phillips head screwdriver.

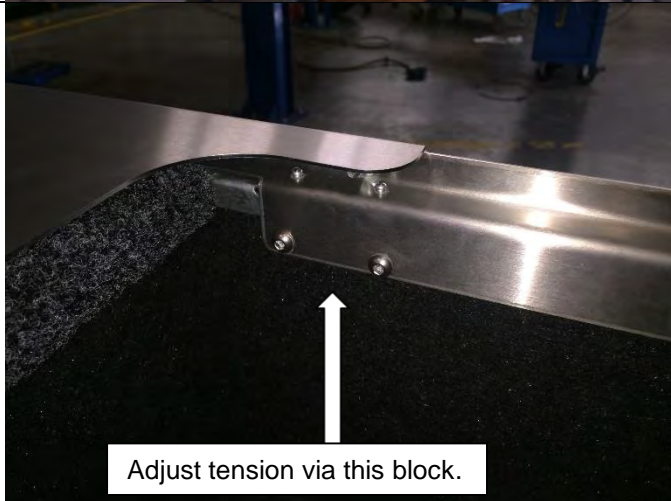

It is possible to adjust the tension on the sliding rails by loosening the screws on the slide block closest to the table top. Move the block up or down and re-tension the screws to achieve the desired tension.



Ensure smooth operation of the table at the completion of the installation.

Attach rubber edge strip to front edge of table. Trim to suit.

