



www.riderite.com

MOUNTING

Do not direct mount air compressor to existing system without vibration isolators. Air compressor should be operated in a well ventilated area where the surrounding air is relatively clean, dry and temperatures are consistently within the range of 35°F to 95°F.

ELECTRICAL

Electrical connections must be made using ring type connectors. All connections must be electrically and mechanically sound to withstand vibration and movement encountered in normal service. Connect positive lead to A1 terminal and negative lead to A2 terminal. Wire size to a minimum 8 gauge. Air compressor must be protected by a separate over-current protector (fuse) located in the positive (+) lead wire from the power source.

FILTER

NOTE: Teflon tape is not recommended when installing intake filters. Do not operate the air compressor without an inlet air filter. Do not clean filter elements with petroleum based products.

LUBRICATION

DO NOT LUBRICATE. Adding greases or petroleum products to this air compressor will reduce performance and can potentially damage the product. This air compressor uses sealed grease-packed bearings and does not require additional lubrication.

