


T14373

QUIET TIP INSERT, 1.875"OD

MBRP

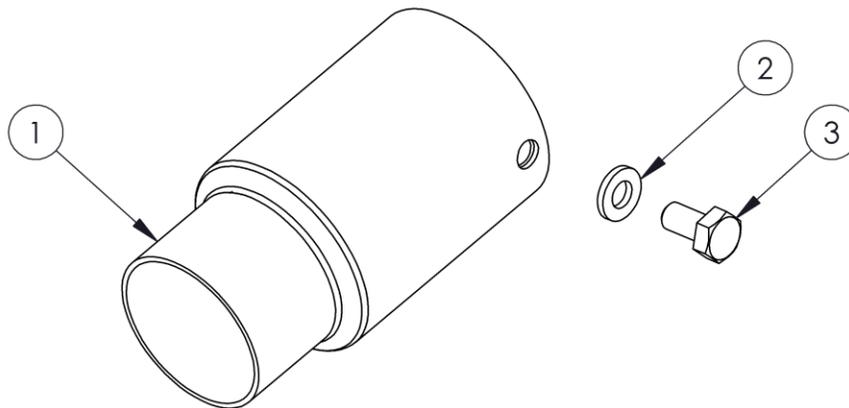

ITEM NO.	DESCRIPTION	QTY.
1	INSERT	1
2	LOCK WASHER	1
3	HEX SCREW	1

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Ltd. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

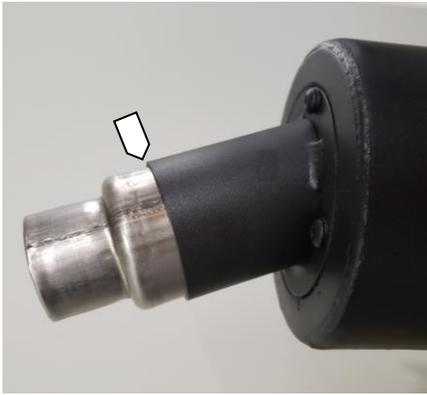


Figure 1



Figure 2

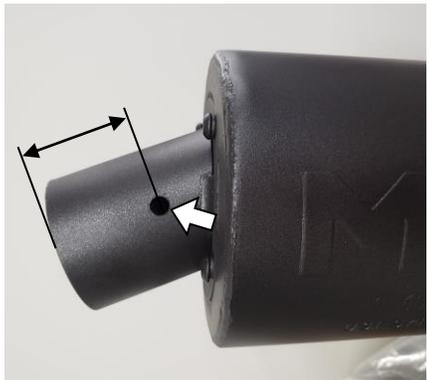


Figure 3



Figure 4

Installation of MBRP Quiet Tip Insert:

1. Place the new **Insert** into the outlet tip of the muffler.
2. Mark a line on the insert at the edge of the tip. **Refer to Figure 1.**
3. Measure the depth from the line to the location of the installation nut/hole. **Refer to Figure 2.**
4. Mark the same measured depth on the muffler tip at the desired screw location (the side of the tip is recommended). **Refer to Figure 3.**
5. Drill a 1/4" hole in the muffler tip.
6. Install the **Insert** into the muffler tip, securing it tightly using the **Hex Screw** and **Lock Washer**. **Refer to Figure 4.**

Congratulations! You are ready to begin experiencing the improved sound and driving excitement of your **MBRP** ATV Exhaust upgrade. We know you will enjoy your purchase.