


0"  
1"  
2"  
3"  
4"  
5"  
6"  
7"  
8"  
9"  
10"  
11"  
12"  
13"  
14"  
15"

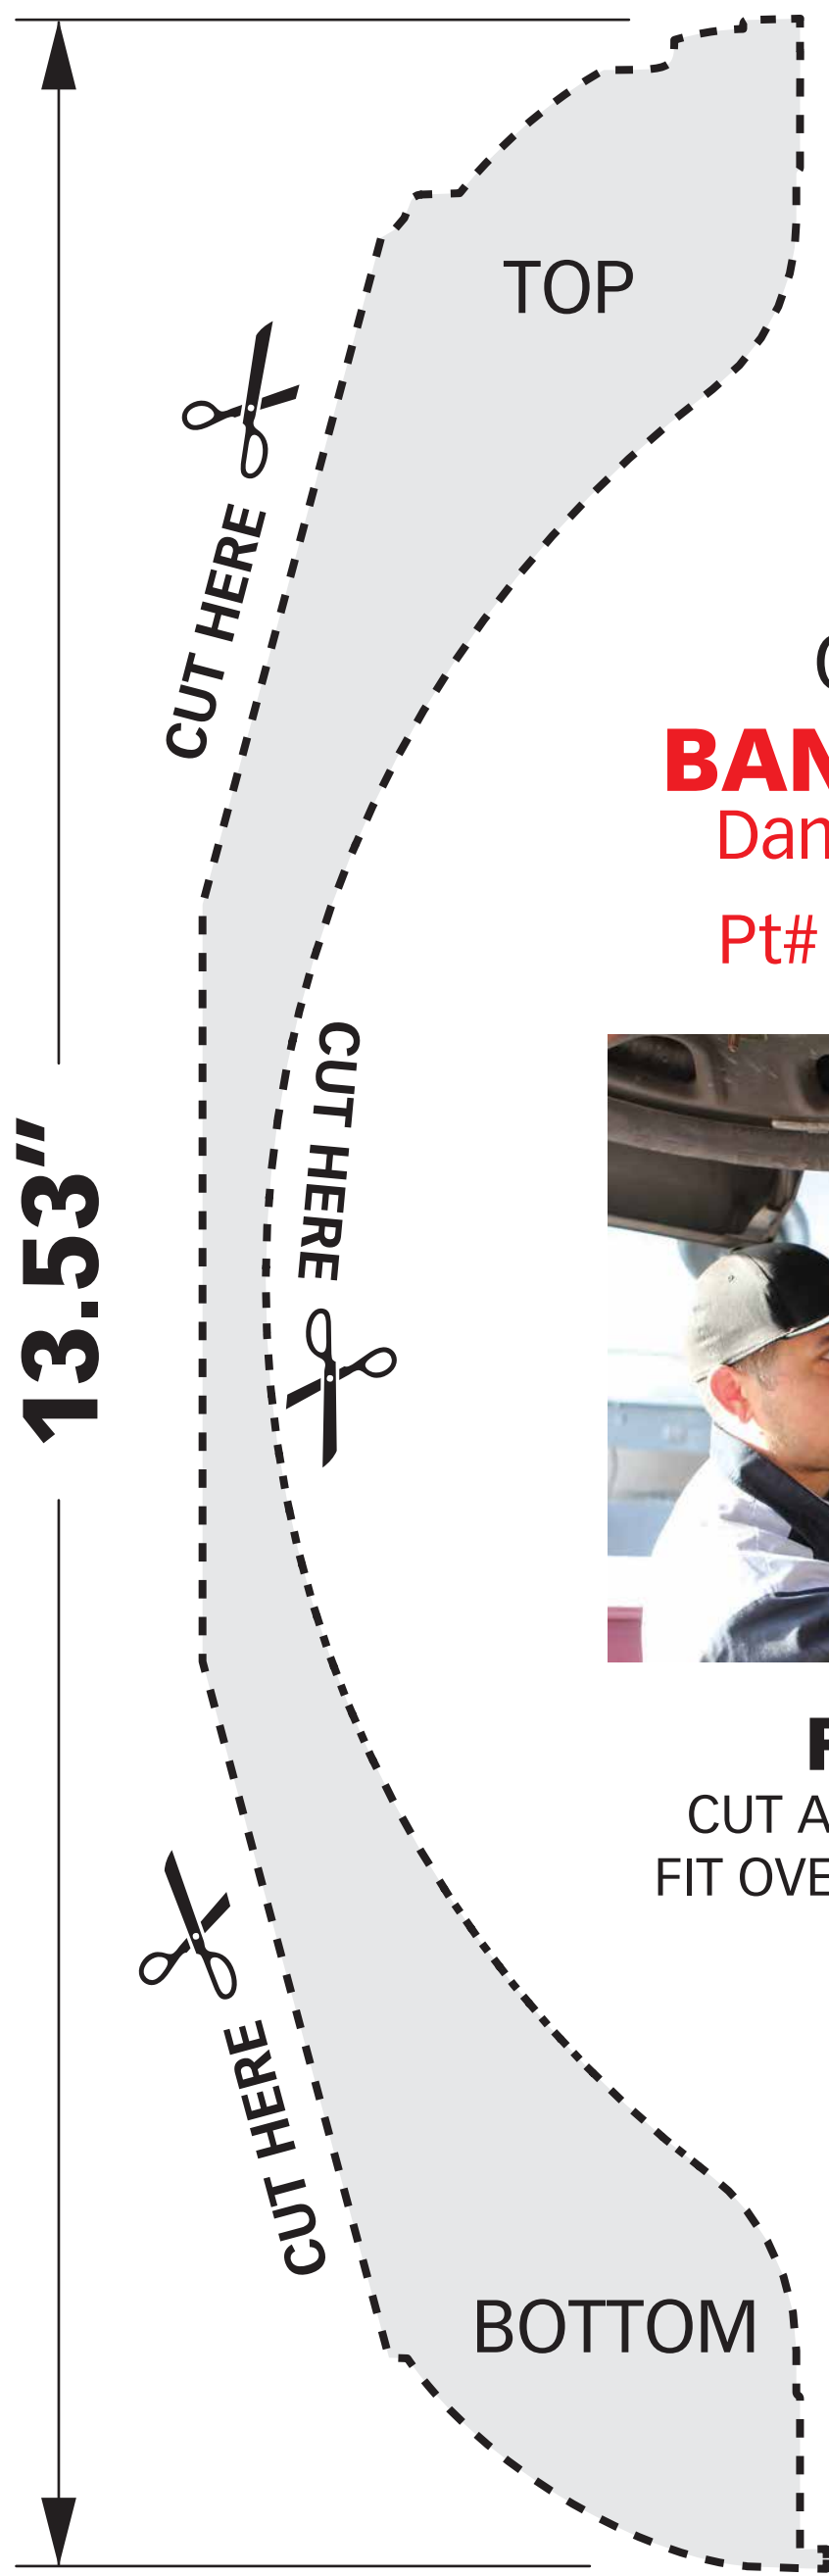

0"  
1"  
2"  
3"  
4"  
5"  
6"  
7"  
8"  
9"  
10"  
11"  
12"  
13"  
14"  
15"


# SIDE

CROSS SECTION

## BANKS DIFF COVER

Dana M275 10.8" 14-Bolt

Pt# 19280, 19281, 19282

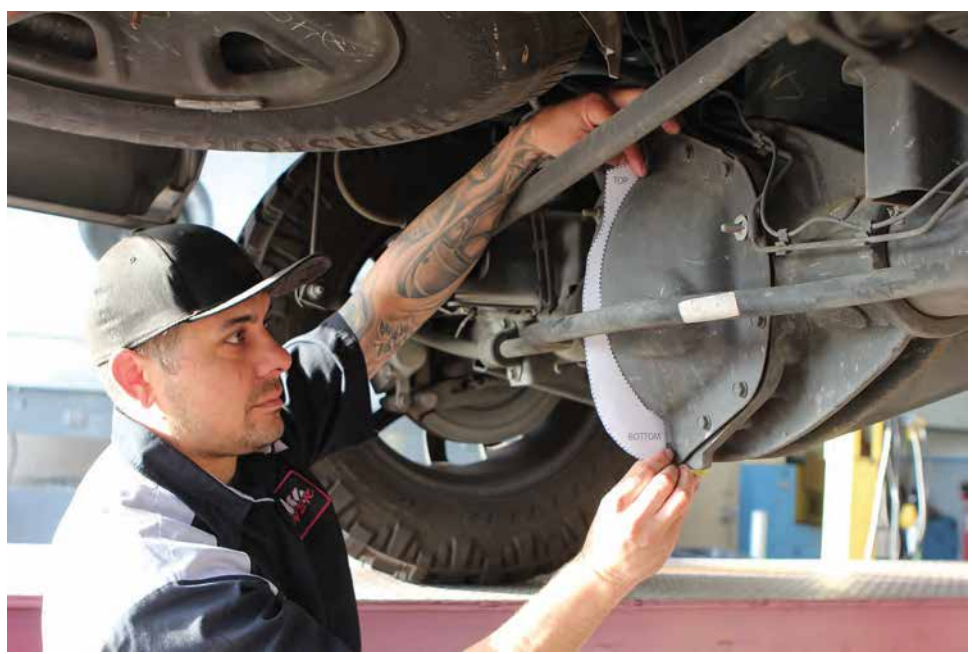

### FITMENT GUIDE

CUT ALONG BLACK DOTTED LINE & FIT OVER YOUR EXISTING DIFF COVER



# TOP

## CROSS SECTION



### **BANKS DIFF COVER**

Dana M275 10.8" 14-Bolt

Pt# 19280, 19281, 19282

### **FITMENT GUIDE**

CUT ALONG BLACK DOTTED LINE &  
FIT OVER YOUR EXISTING DIFF COVER

