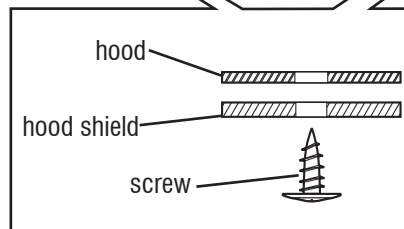
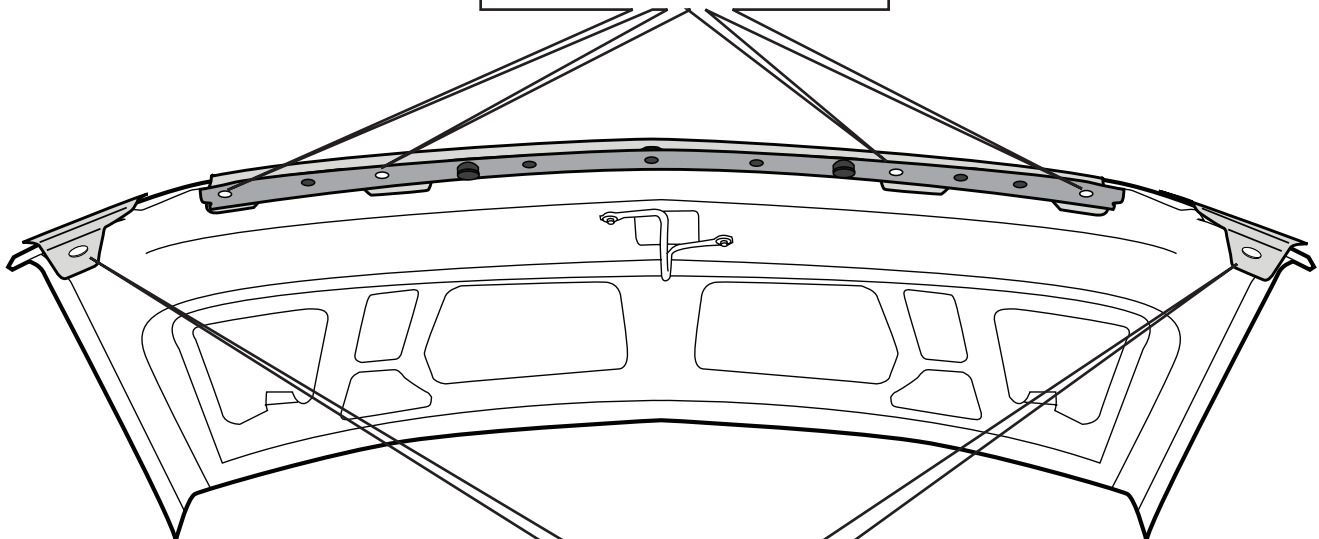
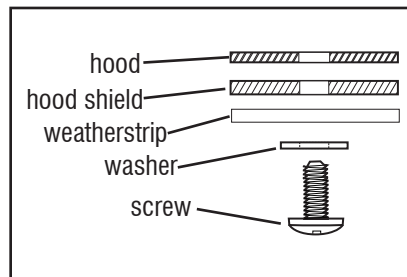


1. Open Hood. Locate the weatherstrip on the leading edge of the hood, and remove **ONLY** the (4) fasteners indicated. Center part on front edge of hood and align holes under weatherstrip. **NOTE:** weatherstrip should be **OVER** flanges at INBOARD locations.
2. Center protective film over grease pencil mark, and wrap around the hood edge.
3. Install a screw with washer in each of the (4) inboard hole locations.
4. Install a self tapping screw in each of the (2) outboard hole locations. **NOTE:** Use caution not to push too hard on self tapping screw and puncture outer hood surface!
5. Close hood. Apply bump-ons to surface of hood and fenders.

INBOARD LOCATIONS**OUTBOARD LOCATIONS**

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.