
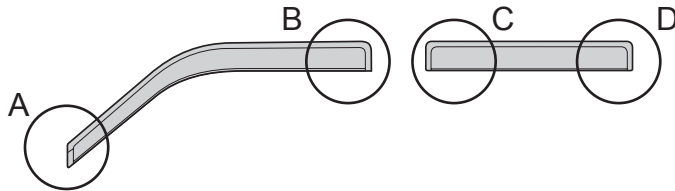
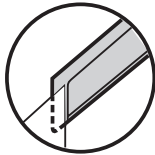
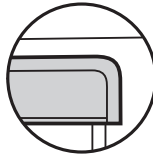
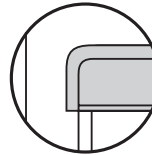


This product is designed to be placed on the painted metal surface of the door, just above the weather stripping.

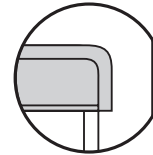


70°-100° F (Install temp.)

- 1 Open door and lower the window. Clean the door's painted surface with alcohol pad where the visor will attach. If Surface Prep Pads are included, apply one coat of Surface Prep to previously cleaned areas on all doors promptly to prevent evaporation.
- 2 Remove the tape liner from the rear flange. Peel back 2" of tape liner from each end of top flange.
- 3 Slide the front flange behind the mirror cap. Carefully use a putty knife, or loosen the mirror cap to create a gap if needed. Attach the top and rear flanges to the door's painted surface.
- 4 Remove tape liner by pulling on free ends. Apply pressure to top and rear tape flanges to secure. Raise the window.
- 5 The rear visor attaches with same preparation methods as the front visor. Attach visor to the vehicle's painted surface.

**A****B****C****D**





IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

This product is designed to be placed on the painted metal surface of the door, just above the weather stripping.

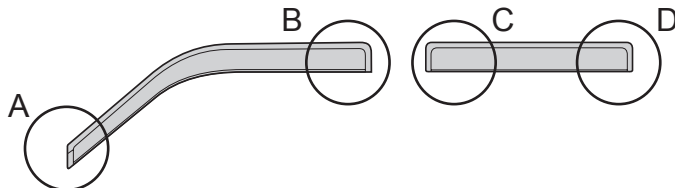

70°-100° F (Install temp.)

- 1 Open door and lower the window. Clean the door's painted surface with alcohol pad where the visor will attach. If Surface Prep Pads are included, apply one coat of Surface Prep to previously cleaned areas on all doors promptly to prevent evaporation.
- 2 Remove the tape liner from the rear flange. Peel back 2" of tape liner from each end of top flange.
- 3 Slide the front flange behind the mirror cap. Carefully use a putty knife, or loosen the mirror cap to create a gap if needed. Attach the top and rear flanges to the door's painted surface.
- 4 Remove tape liner by pulling on free ends. Apply pressure to top and rear tape flanges to secure. Raise the window.
- 5 The rear visor attaches with same preparation methods as the front visor. Attach visor to the vehicle's painted surface.

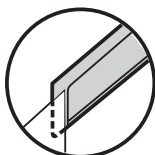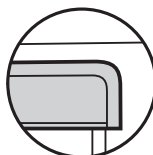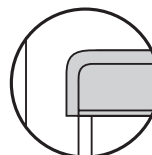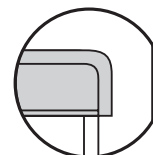**A****B****C****D**

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219