


Edelbrock

THROTTLE LINKAGE KIT PART #7071, #7077 & #7099 INSTALLATION INSTRUCTIONS

- **PLEASE** study these instructions carefully before installing your new throttle linkage kit. If you have any questions, do not hesitate to contact our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday or e-mail us at **Edelbrock@Edelbrock.com**.
- **DESCRIPTION:** These kits fit Edelbrock Victor Ram manifold #7070 base with #7073 top for small-block Chevys or #7075 base with #7079 top for big-block Chevys with two sideways mounted carburetors. #7099 fits Street Tunnel Ram #7110.

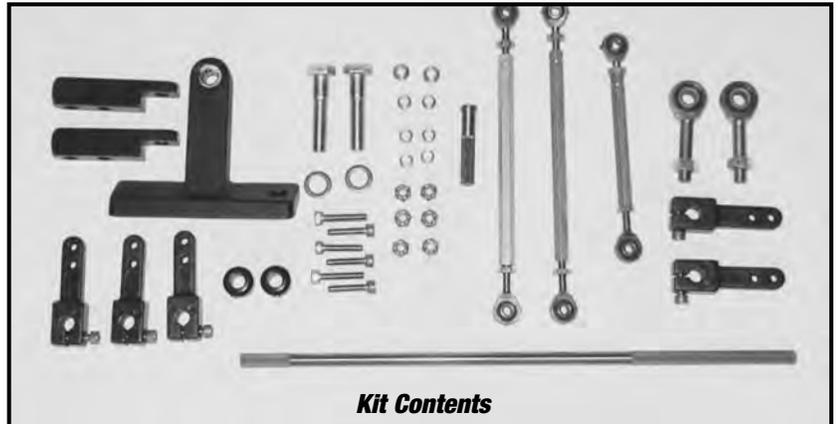

• INSTALLATION

1. Assemble the large spherical rod ends on the two 5/8" sq. x 2" long brackets as shown in photos 1 and 2. Make sure the notched portion of the bracket is facing down. Bolt the notched end to the carburetor base as shown in photos 1 and 2.
2. Slide the serrated shaft thru the front spherical rod end with the long serrations toward the rear carburetor. Next, slide on one of the short locking collars that have set screws. Slide on the two rear arms facing in the direction as shown in photos 1 and 2. Position the arms slightly less than 90° from each other. Slide the serrated shaft into the rear spherical rod end.
3. Slide first the other short locking collar and then the front arm onto the serrated shaft as shown in photos. The front arm should line up with the rear arm.
4. Tighten the screws on both the arms and locking collars.
CAUTION- it is not necessary to overly tighten these screws as the serrations prevent the arms from slipping.
5. Assemble the small spherical rod ends onto the two long hex bars. The end of the hex bar which has the groove on the outside is the left hand thread. Assemble one end of the now assembled linkages onto the aluminum arms using the 10-24 x 7/8" bolts and locknuts. See photos 1 and 2.

Edelbrock Corporation
2700 California St., Torrance, CA 90503
Tech Line: (800) 416-8628
Office: (310) 781-2222
E-Mail: Edelbrock@Edelbrock.com