



Edelbrock

**Installation Instructions
Catalog Number: 7097**

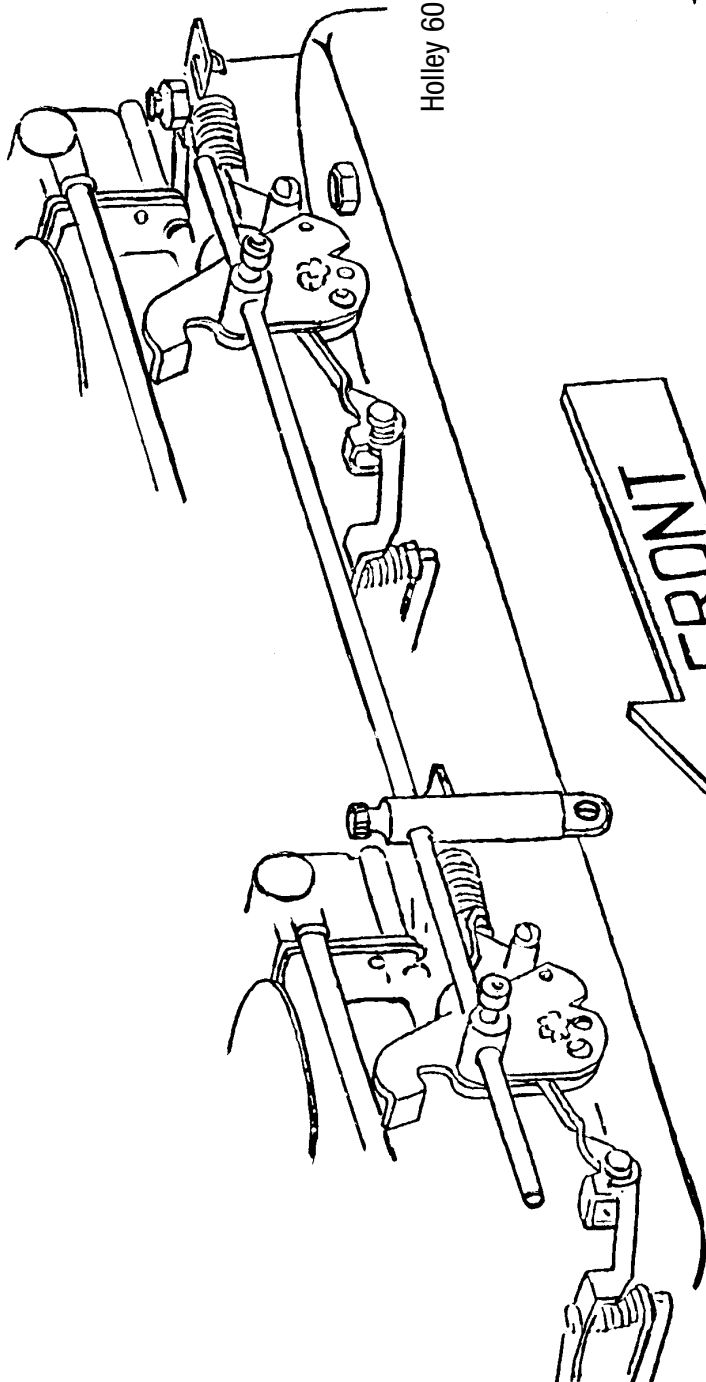

Holley 600 C.F.M. installation

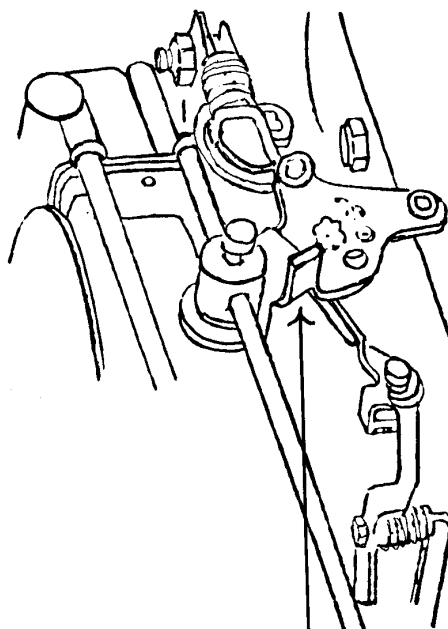

Holley 4224 installation 660 C.F.M.

For Holley 0-9776 installation, you must bend or remove tab shown in diagram on carburetors for proper W.O.T. linkage clearance.

**Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech Line: 1-800-416-8628 • E-Mail: Edelbrock@Edelbrock.com**