



VSF68

Installation Instructions For Ventshade Rain Deflector

1. Rain deflectors are stamped to show position, LF for left front, RF for right front.

2. Use putty knife or screw driver to grasp and pull out rubber window channel. See fig. 1.


3. Rolls down rubber above vent post. See fig.1 (Do not pull out).

4. Insert lateral flange between rubber and metal frame. See fig 2. The flange overlaps the vent post between the rubber and metal frame. Work lateral flange up between the rubber window channel and window frame. See fig.2. **NOTE:** For proper installation, flange should completely disappear and rain deflector curves, fit flush up to the window frame



5. With the rain deflector in position, center punch and drill 5/64 inch diameter hole through hole in rain deflector nearest vent post and install one of the screws furnished. See fig.3.

6. Holding rain deflector in position, center punch and drill remaining holes and insert screws. **NOTE:** Holes should be drilled at 90 degrees to surface of metal. Drilled holes should be touched up with paint to prevent rusting, and caulking compound placed on screws to seal holes.

7. Replace the rubber window channel.

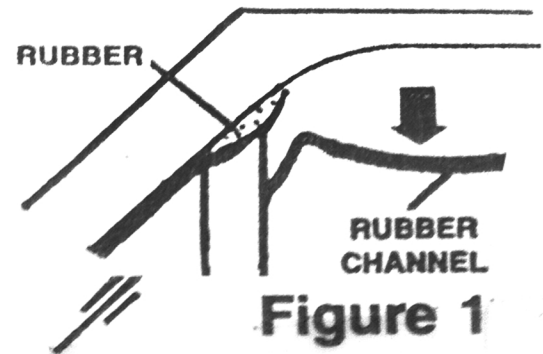

RAIN DEFLECTOR
OVERLAPS
VENTPOST

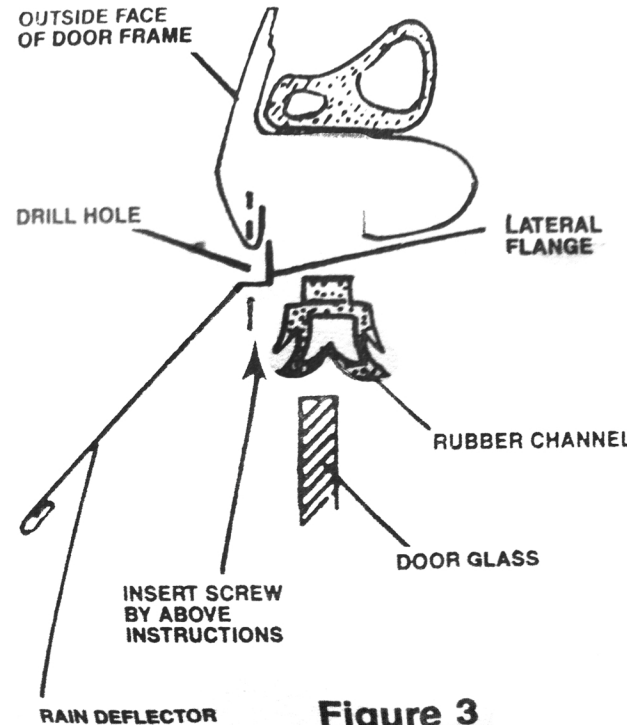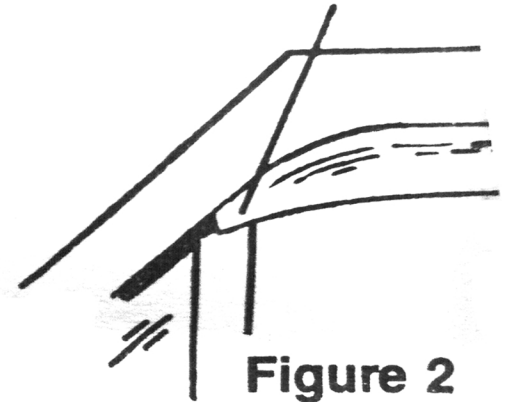

NOTE:
Wipe Rain Deflector after
installation with clean cloth using
metal cleaner or polish.